

Industrial Automation

IMI Norgren

97100 Inline, 3/2 & 5/2 Indirect solenoid actuated spool valves

- Port size: 1/4" (ISO G/NPT)
- For single and double operated actuators
- Crossover-free switching, switch-over function guaranteed even with small cross section air supply
- Manual override with detent standard

The solenoid valves are applicable in the protection class
Ex m for zones 1, 2, 21, 22 (gases and dusts)
ATEX cat.II 2GD
Ex ia for zones 1, 21, (gases) ATEX cat.II 2G,
Ex nA, for zones 2, 22 (gases and dusts)
ATEX cat.II 3 GD



Technical features

Medium:

Filtered, non-lubricated or dry compressed air

Operation:

Indirectly solenoid operated soft seal valves

Operating pressure: 2 ... 8 bar (29 ... 116 psi)

Orifice: 6 mm

Port size: G1/4, 1/4 NPT

Mounting position: Optional

Flow direction:

Fixed

Electrical connection: See solenoid table

Ambient/Media temperature: Valve:

-15° ... +60°C (+5° ... +140°F) Depending on solenoid system Air supply must be dry enough to avoid ice formation at temperatures below +2°C (+35°F). Materials:

Housing: Aluminium 3.0615

anodized

Pilot flange: Plastic (PBT)

Seals: NBR

Technical data

Symbol	Port size	Function	Actuation/return	Operating pressure (bar)	Flow (l/min)	Weight (kg)	Dimension No.	Model *1)
12 2 10	G 1/4	3/2	Solenoid/ air spring	2 8	750	0,25	1	9713032
	1/4 NPT	3/2	Solenoid/ air spring	2 8	750	0,25	1	9713042
1 3								
14 4 2 12	G 1/4	5/2	Solenoid/ air spring	2 8	750	0,25	2	9710032
14 4 2 12	1/4 NPT	5/2	Solenoid/ air spring	2 8	750	0,25	2	9710042
513								
14 4 2 12	G 1/4	5/2	Solenoid/Solenoid	2 8	750	0,35	3	9711032
	1/4 NPT	5/2	Solenoid/Solenoid	2 8	750	0,35	3	9711042
513								
14 4 2 12	G 1/4	5/3 APB	Solenoid/Solenoid, APB	2 8	500	0,40	4	9712032
14 4 2 12 	1/4 NPT	5/3 APB	Solenoid/ Solenoid, APB	2 8	500	0,40	4	9712042
513								

 $^{^{*1}}$) When ordering, please indicate solenoid, voltage and current (frequency). Valve function: APB = All Ports Blocked



Solenoids, standard voltages

Power consumptio 24 V d c 23		sumption		Rated current F C 24 V d.c. 230 V a.c. I		Ex-Protection (ATEX-Category)	Temperature Ambient/Media (°C)	Electrical connection	Weight	Drawing	Circuit diagram	Model
		/A)		n A)	IP/NEMA		()		(kg)	No.	No.	
	1,8	-	70	-	IP65 (with connector)	_	-15 +50	Connector DIN EN 175301-803, form B *1)	0,1	11	1	3050
	0,7	2,0 *2)	29	4	IP65 (with connector)	_	-15 +50	Connector DIN EN 175301-803, form A *1)	0,1	12	1	3034
O The State of the	2	-	85	_	IP65 (with connector)	II 3 G Ex nA IIC T5 Gc II 3 D Ex tc IIIC T95° Dc IP65	-15 +50	Special connector DIN EN 175301-803, form A	0,3	12	1	3046
_1	2,7	-	115	_	IP65 (with connector)	II 2 G Ex mb IIC T5 Gb II 2 D Ex mb tb T95°C Db	-20 +50 *2)	Cable length 3 m	0,3	13	14	3062
	_	2,1	_	9	IP65 (with connector)	II 2 G Ex mb IIC T5 Gb II 2 D Ex mb tb T95°C Db	-20 +50 *2)	Cable length 3 m	0,3	13	15	3063
	2,7	_	115	_	IP66 (with connector)	-	-10 +50	Connector *1) M12x1, DIN IEC 61076-2-101 Solenoid with yellow LED	0,1	14	17	3071

Standard voltages ($\pm 10\%$) 24 V d.c., 230 V a.c., other voltages on request. Design according to VDE 0580, EN 50014/50028. 100% duty cycle. *1) Connector is not scope of delivery, see table »Accessories« *2) For battery installation +40°C only

Solenoid actuators for intrinsically-safe circuits

	Nominal resistance RN coil	Min. required switching current	Resistance Rw 60 coil	Required voltage at terminal	IP Protection class	Ex-Protection (ATEX-Category)	Temperature Ambient/Media (°C)	Weight	Drawing	Circuit diagram	Model
	(Ω)	(mA)	(Ω)	Rw 60 (V)			(-,	(kg)	No.	No.	
Control of the Contro	275	37	345	13,8	IP65 (with connector)	II 2 G Ex ia IIC T6/ T4 Ga	T6: -40 +50 T4: -40 85	0,2	15	13	3039

When selecting an intrinsically safe power supply, the permissible maximum values according to the Certificate of Conformity should be taken in account. On the other hand, the low effective inductivity and capacity can be ignored.

Connector DIN EN 175301-803 form A is not scope of delivery,, see table »Accessories»


Approvals

Μ	lodel	Approvals ATEX	IECEx	FM			Datasheet
30	039	PTB 03 ATEX	< 2134		_	CSA-LR 51090-4	N/en 7.1.550
30	04x	PTB 06 ATEX	X 2055		-	_	N/en 7.1.555
30	06x	PTB 03 ATEX	< 2015		_	_	N/en 7.1.560



Option selector




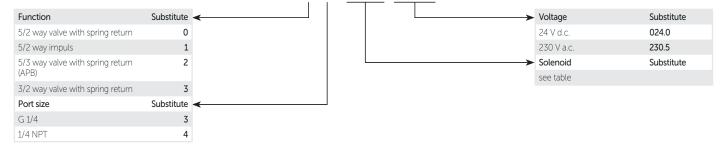

Accessories



Manifold plates

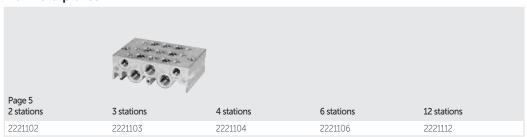

Accessories for manifold plates



^{*1)} For blocking of unused valve stations

^{*2)} Necessory for using two different pressure





Dimensions


Dimensions in mm Projection/First angle





Valves

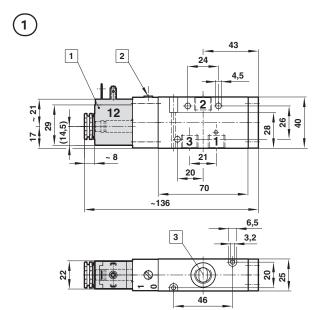


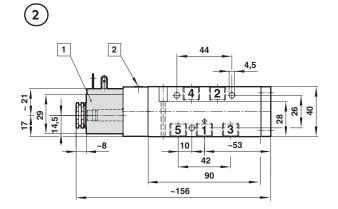

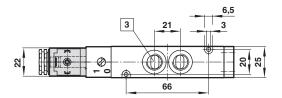

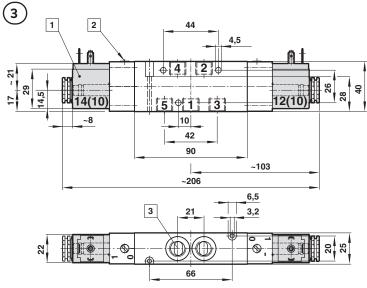

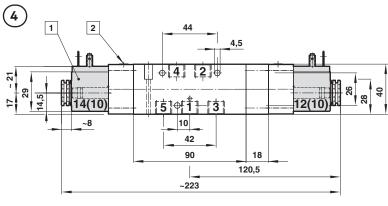

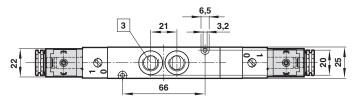


- 1 Solenoid 90° turnable 2 Manual override 3 Port size G1/4 or 1/4 NPT




Dimensions

Manifold plate 2 and 3 stations

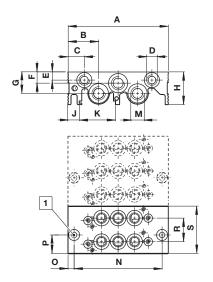

Manifold plate 4 ... 12 stations

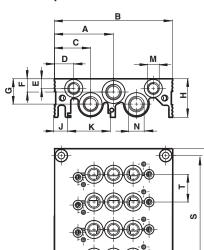








Model	Α	В	С	D	Ε	F	G	Н	J	К	L	М	N	0	Р	R	S	Т	U
2er	52	104	26	9	8	13	20	33	10	35,5	52	G 1/8	G 3/8	40	24	26	-	26	for M5
3er	52	104	26	9	8	13	20	33	10	35,5	78	G 1/8	G 3/8	40	24	52	-	26	for M5
1-12or	52	104	26	Q	Ω	13	20	77	10	35.5	(v.26)±23	C 1/8	C 3/8	40	2/	6.5	(v.26)±10	26	for M5



Dimensions



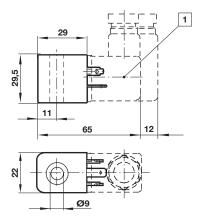


(12)


Dimensions in mm Projection/First angle






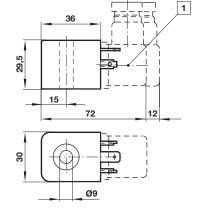




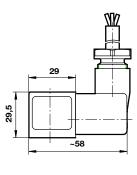

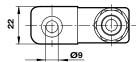





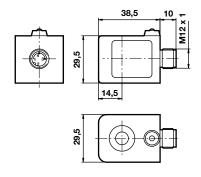

Electrical connection M 12 x 1



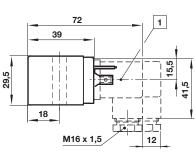

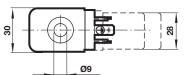



Pin	Signal	Cable
1	+ UB	brown
2	Out 2 (PNP) / analogue 4 to 20 mA	white
3	0 Volt	blue
4	Out 1 (PNP)	black

1 Connector 4 x 90° turnable




Circuit diagrams


Dimensions in mm Projection/First angle






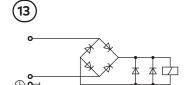



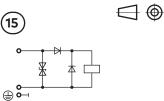




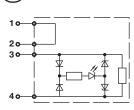

Silencer

Model: M/S2, C/S2

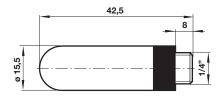

Warning

These products are intended for use in industrial compressed air systems only. Do not use these products where pressures and temperatures can exceed those listed under »Technical features/data«.

Before using these products with fluids other than those specified, for non-industrial applications, life-support systems or other applications not within published specifications, consult Norgren.

Through misuse, age, or malfunction, components used in fluid power systems can fail in various modes.

The system designer is warned to consider the failure modes of all component parts used in fluid power systems and to provide adequate safeguards to prevent personal injury or damage to equipment in the event of such failure.

System designers must provide a warning to end users in the system instructional manual if protection against a failure mode cannot be adequately provided.

System designers and end users are cautioned to review specific warnings found in instruction sheets packed and shipped with these products.